

## USB or USB/FW Interface Instructions

On the back of the duplicator there is a USB or USB/FW Connector. (Dependent on your upgrade) This slot lets you connect the bottom drive of your duplicator to your PC. Your PC will see this drive as an external DVD Drive.

### Using the USB or USB/FW Connection:

Have your PC on and booted up ready to go. Have the Duplicator plugged into A/C power, and the USB switch on the back of the machine switched to "ON".

Turn on the Duplicator. On your computer you should soon see a pop-up message saying "New Device Detected." If you open up "My Computer" on your PC you should now see a new DVD drive there.



**\*\*USB or USB/FW are not standard features and are available on an upgrade basis.**

**ON;** USB enabled. Computer will see bottom drive of the duplicator. This drive is now no longer available for duplication.

**OFF:** USB Disabled. (Note: If USB Switch is toggled OFF while duplication tower is ON, you must restart the duplication tower.

**RED LED:** Power indicator (When illuminated, Power is ON)

**GREEN LED:** Activity indicator (Green light will "flicker" during activity)


You can now use this drive to create your master disc from your PC. When you are done using this drive and ready to duplicate, turn the USB switch back to "Off" and restart the duplicator.



Summation Technology, LLC  
1155 Kelly Johnson Blvd,  
Suite 130  
Colorado Springs, Colorado 80920

Toll Free: 1-888-340-3738  
Phone: 719-590-6063  
Fax: 719-590-6057

Email: [info@summationtechnology.com](mailto:info@summationtechnology.com)

 We Are a U.S. Based Company